


installation manual



Put the 4 legs...



Stand base cover into lower tube.

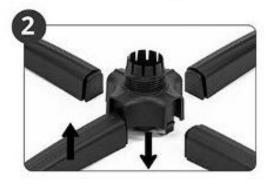

...into slot...



Then lower tube into stand center tank.



...accordingly.



Rotation lock stand base cover.



3


Place the head part.



installation manual



Lock the head part.

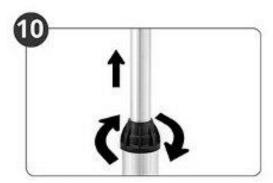

Adjust the height requested with tightness of plastic colar.



Place the unit.



Lock the unit.



Ready to use.