

Montageanleitung für Kabelverschraubungen Progress® EMV RAPID

Assembly Instructions for Cable Glands Progress® EMC RAPID

1 Komplette Kabelverschraubung (5 Teile) in das vorgesehene Gehäuse einschrauben, ohne die Druckmutter fester anzuziehen.

2 Kabelaussenmantel partiell abisolieren oder auf gewünschte Länge zuschneiden.

Hinweis: Zum Schutz des Kabelschirms, kann ein Kupfer-Tape auf den Schirm montiert werden.


3 Kabel in die Kabelverschraubung einführen, bis der Schirm in der Kontaktscheibe (5) einrastet oder der Kabelmantel an der Scheibe ansteht.

4 Druckmutter (1) mit dem Unterteil (4) verschrauben bis der Dichteinsatz zwischen Druckmutter und Kabel einen kleinen Wulst bildet.

Bitte benutzen Sie die Tabelle Montage-Drehmoment auf unserer Website www.agro.ch.

Die Progress® EMV Rapid kann durch Ausstossen der Kontaktscheibe (5) auch ohne Weiterführen des Schirms montiert werden. Weitere Informationen dazu in der Montageanleitung der PROGRESS EMV oder dem Montagevideo auf unserer Webseite www.agro.ch.

Montage nur durch in der Elektrotechnik ausgebildete Installateure! Liegen keine entsprechenden Fachkenntnisse vor, so kann es zu einer unsachgemässen Montage kommen, welche die Sicherheit des Produktnutzers gefährdet.

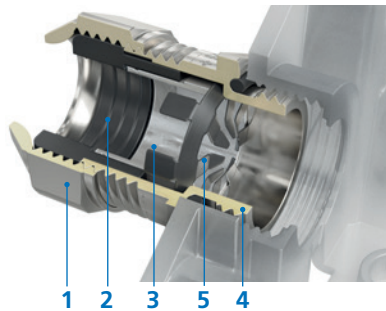


1 Screw in the complete cable gland (5 parts) into the intended housing without further tightening the compression nut.

2 Partially dismantle the outer cable sleeve or trim to the desired length.

Note: To protect the cable shield, a copper tape may be wrapped around the shield.

3 Feed cable into the cable gland until the shielding engages with the contact disc (5) or the cable sheath comes in contact with the disc.

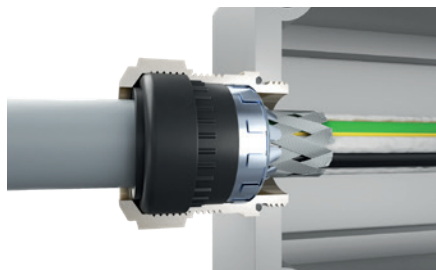

4 Tighten compression nut (1) onto the cable gland's lower part (4) until the sealing insert bulges slightly between the compression nut and the cable.

Please refer to the instruction sheet with details of installation torques on our website, www.agro.ch.



The Progress® EMC Rapid can also be mounted by pushing out the contact disc (5) if the cable shield can be cut at this location.

Further information can be found in the PROGRESS® EMC installation instructions or by viewing the installation video on our website, www.agro.ch.

Installation only by competent technicians with suitable training in the field of electrotechnology! If the installer does not have the required specialist knowledge, this can result in improper installation, jeopardising the safety of the product user.

